Ultralux®

TUYA - 2.4G RF remote control, 1 zone

Model № SSWF1Z

DESCRIPTION

ULTRALUX 2.4G SMART control lighting system includes various RF remote controls, constant current dimmable drivers, constant voltage dimmers and controllers. The system allows to control the lighting up to four zones. The RF remote control SSWF1Z is compatible with TUYA APP and can control ULTRALUX constant current drivers SSD24230, SSD40850, SSD13300, constant voltage dimmer for LED strip SSD1216, dimmer 0-10 V DC SSC010 and switch 220 V AC SSK500. Compatible with RF remote controls SSG1Z, SSW1Z, SSRF1Z, SSR1Z from same system. For building in electrical console box or other distribution box.

TECHNICAL DETAILS

- Working voltage: 220-240 V AC/ 50-60 Hz
- Remote distance: up to 20 m open area
- Control application: Tuya Smart
- IP rate: IP20
- Dimensions: 52/ 52/ 26 mm
- Working temperature: -10° C ÷ +40 ° C
- Warranty: 2 years

READ THE INSTRUCTIONS BEFORE MOUNTING OR REPLACEMENT

- Performing any activity with the power supply on constitutes potential hazard of electric shock. Prior to mounting, power supply must be switched off by using the main switch!
- The controller may only be connected to a properly functioning electrical system with compliance with the applicable standards. Activities related to connection to the power supply are to be commissioned to a person with appropriate authorization. The mounting must be performed in accordance to the scheme provided.

mm

00

52.

• The importer/supplier bears no responsibility for damages resulting from failure to comply with these instructions.

MECHANICAL STRUCTURES AND DIMENSIONS





Buttons:

K1: Long pressing 5 seconds to start the connecting with TUYA app.

K2: Long pressing 5 seconds to copy the RF code from other remote control.

K3: Long pressing 5 seconds to clear the RF code of receivers

K4: Long pressing 5 seconds to pair the RF code to un-coded receivers.

Indicator light:

For WIFI green: will light up after linking with Tuya Smart app. For RF red: will light up/ flash according to the state. ww.ultralux.bd

TYPICAL WALL JUNCTION BOX MOUNTING



Utrolux®

INSTRUCTIONS

2. Pairing receiver with TUYA- 2.4G remote control by K4 button.

Step	Operation	Instructions			
		1. It is necessary to clear the code first, if the			
		receiver was coded before.			
1	Connecting the load to the receiver and	2. Batch operation can be performed within			
T	power on it.	the remote control range.			
		3. Please remember to cut off other un-code			
		zones power, or will be paired together.			
		The indicator of the TUYA-2.4G remote control will			
2	Press and hold K4 on the TUYA-2.4G	flash quickly, see the load light flashes 3 times and			
2	remote control for 5 seconds	return to the initial state, means matching coding is			
		finished successfully.			
2	Bross any key to exit and end the operation	Also, will automatically exit code transmission status			
3	Press any key to exit and end the operation	after 60 seconds.			

Tips: If also using RF remote control, please pair the receivers with RF remote control at first (Please find the operation instructions from RF remote control manual). And then copy RF code from the RF remote control with K2 button. The operation as below:

Step 1: Main remote control: Press and hold corresponding key for 5 seconds. The indicator of the remote control will flash quickly, means it enters the pairing code transmission status.

Step 2: TUYA – 2.4 remote control. Press and hold **K2** key for 5 seconds, indicator will turn from 100% to off means it enters learning code status.

Step 3: Indicator of TUYA – 2.4G remote control flash 3 times after successful code learning.

3. Code clearing operation: that the original code value of the receiver will be cleared and returned to the factory state. Then it can be controlled by any compatible remote control, also can be paired to a new code

	code.	
Step	Operation	Instructions
1	Connecting the load to the receiver and power on it.	 The clearing operation should be finished within 1 minute after the receiver is powered on. Batch operation can be performed within the remote control range.
2	Press and hold K3 on the remote control for 5 seconds.	 The indicator of the remote control will flash quickly, see the load light flashes 3 times and return to the initial state, means pairing coding is finished successfully. If the original remote control is lost, the new remote control can be used for clearing operations.
3	Press any key to exit and end the operation.	Also will automatically exit code transmission state after 60 seconds.

• TUYA – 2.4G remote control RF code learning form receiver

- 1. Turn off the power supply of the receivers.
- 2. Press and hold K2 key for 5 seconds until RF indicator of TUYA 2.4G remote control turns off.
- 3. Turn on the power supply of the controlers. RF indicator of the TUYA 2.4G remote control flashes 3 times after successful code learning.

Note: The distance from receivers to TUYA – 2.4G remote control should be less than 2 meters.

www.ultralux.bg



• Restoring factory settings of TUYA – 2.4G remote control.

- 1. Press and hold K2 key for 20 seconds until indicator off remote control process the state as 100%-off-100%.
- 2. Press **K3** button to submit and finish the operation. Indicator of the remote control will flash three times after successful operation.

• Range

Range of control on 2.4G Smart system is not limited from the range of remote controller. In a large premises, exceeding the range of remote controller, drivers/dimers transmits signal among themselves and inspect the light state for each other. This is possible when distance between drivers/dimers is less than 10 meters.



CONNECTING THE TUYA – RF REMOTE DEVICE WITH THE TUYA SMART APPLICATION

14:49 📮 🔹 ан ж 🗍 Кан ж 🖉	14:50 🖬	الله الله (عن الله الله الله) dd Manually Auto Scan (ج)	14:50 📕 🗼 ani ani 🐑 🗊 Cancel
Set your home location for more information >	Electrical	Light Source	Select 2.4 GHz Wi-Fi Network and enter password.
All Devices	Sensors Large Home Ap Small Mome Ap Appliances	Light Source (BLE+WI-Fi) Light Source (BLE) Strip Light Source (after)	Rext
No devices Add Device	Exercise & Health Security & Video Sur Gateway Control	Strip Lights Strip Lights Strip Lights (BLE+WFF) (WFFi) (BLE) Strip Lights (BLE) Strip Lights (BLE)	1234567890 gwertyuiop
	Energy Entertainm ent	Ceiling light (BLE+WI-Fi) (WI-Fi) (BLE)	a s d f g h j k l ↑ z x c v b n m ≪
Home Smart Me	Industry & Agriculture	Celling light (Zidbee)	7123 ,

ww.ultralux.b

10



Picture 7

Picture 8 Download the app Tuya Smart from Google Play (Android) or App Store (iOS).

2. Install the app.

1.

- Register and sign in the app. 3.
- 4. Press the button Add a device or the small + button, located in the top right corner (pic. 1)
- 5. In the Lighting section choose Light source (WI-FI) (pic. 2)
- Choose Wi-Fi network. Enter the password to access the network. Press the button Next (pic. 3) 6.

Picture 9



- 8. Select the check-box in the section **Confirm the light is blinking rapidly.** Press the button **Next** (pic. 4).
- 9. The process of adding the device begins (pic. 5).
- 10. After the device is added successfully you can rename it. Press the button **Done** (pic. 6).

Kore C Schedule C Add Schedule Save Cohedule 13 51 14 52 15 53 Note 15 53 Note 10 10 10 Not timer data Ad ON/OFF ON 10 10	14:52		· · · · · · · · · · · · · · · · · · ·	14:52 🧧		ւն 🖉 հետե	14:53 🛄			10 🕫 In In 8
Checkle 13 51 14 52 15 53 Notification 1 Notification 1 ON/OFF ON	<	More		<	Schedule		<	Add So	hedule	Sav
Image: Second	Schedule							13	51	
Image: second								14	52	
Notimer data Add Notification ON/OFF								15	53	
No timer data Add Add Note Notification ON/OFF ON/					Ä		Repeat			Once 2
Add Notification ON/OFF ON					No timer data		Note			
				(Add	\sum	Notification			a
							ON/OFF			ON
		۲	•		۲	•				•

Picture 10

Picture 11

Picture 12

- 11. With the green button, located at the right side of the row, you can turn on/off the device (pic. 7).
- 12. Press the inscription on the device to enter the control menu (pic. 7).
- 13. The big button at the center of the menu switches on/off the device. The slider below it is used for dimming of the lighting (pic. 8).
- 14. Press the middle button, located at the bottom. Here you can choose particular lighting presets and edit them (pic. 9).
- 15. Press the right button, located at the bottom, to create a work schedule.
- 16. Press the inscription **Schedule** (pic. 10) and as there is no working schedule yet, an inscription **No timer data** will appear. Press the button **Add** (pic. 11).
- 17. Creating a schedule consists of determening the following (pic. 12):
 - Hour when the action will take place;
 - Repeating the action (pic. 13);
 - Adding a remark (pic. 14);
 - Determining the type of action, whether to turn on/off the referrent device (pic. 15);

14:53	الله الله الله الله الله الله الله الله	14:53		8 al al 2 III	14:53 📴		* al al ®
<	Repeat	<	Add Schedule	e Save	<	Add Schedule	
ne action will be carrie	d out only once if you do not select it.						
ın.			13 51			13 51	
.on.			14 52			14 52	
ues.			Note			15 53	
Ved.							
hurs.		Rej	ancel	e > Save	Re	ON/OFF	
ri.		Note		*	NO ON		0
at.		Notification		0	No OFF		0
		ON/OFF		ON >	ON	Cancel	Done
		on, or r		0.077			
				¢ ¢	_		
		q w e	e r t y	úi°óp°			
		a s	d f g h	j k l			
		Ϋ́Ζ	x c v b	n m 🗵			
		?123 ,	0				
	۰ ۲			•	_		

_ _

Picture 13 Picture 14 TAKING CARE OF THE NATURAL ENVIRONMENT CLEANLINESS

• The product and its components are not harmful to the environment

- Please dispose the package elements separately in containers for the corresponding material.
- Please dispose the broken product separately in containers for out of usage electrical equipment.