


ТЕХНИЧЕСКИ ПАРАМЕТРИ

LOLF1240CCT

Захр. напрежение: 220-240 V AC/50 Hz
 Мощност: 40W
 Светлинен поток: 4000 lm
 CCT: 3000K/4000K/6000K
 Размери: 50/70/1200 mm
 Степен на защита: IP20
 CRI: Ra≥80
 Ъгъл на излъчване: 120°
 Комплект за окачен монтаж
 Комплект за свързване на тела
 Прозрачен кабел 1.5 метра



ВГ: Този продукт включва светлинен източник с клас на енергийна ефективност E.

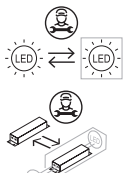


LOLFCL20CCT

Захр. напрежение: 220-240 V AC/50 Hz
 Мощност: 20W
 Светлинен поток: 2000 lm
 CCT: 3000K/4000K/6000K
 Размери: 328/328/70 mm
 Степен на защита: IP20
 CRI: Ra≥80
 Ъгъл на излъчване: 120°
 Комплект за окачен монтаж
 Комплект за свързване на тела



Този продукт включва светлинен източник с клас на енергийна ефективност E.

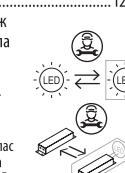


LOLFCH40CCT

Захранващо напрежение: 220-240 V AC/50 Hz
 Мощност: 40W
 Светлинен поток: 4000 lm
 CCT: 3000K/4000K/6000K
 Размери: 606/606/70 mm
 Степен на защита: IP20
 CRI: Ra≥80
 Ъгъл на излъчване: 120°
 Комплект за окачен монтаж
 Комплект за свързване на тела



Този продукт включва светлинен източник с клас на енергийна ефективност E.

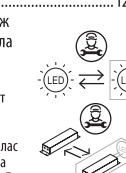

LOLFCT30CCT

Захранващо напрежение: 220-240 V AC/50 Hz
 Мощност: 30W
 Светлинен поток: 3000 lm
 CCT: 3000K/4000K/6000K
 Размери: 328/606/70 mm
 Степен на защита: IP20
 CRI: Ra≥80
 Ъгъл на излъчване: 120°
 Комплект за окачен монтаж
 Комплект за свързване на тела



Този продукт включва светлинен източник с клас на енергийна ефективност E.



LOLF51K

Комплект за повърхностен монтаж.
ПРОДАВА СЕ ОТДЕЛНО!


ИНСТРУКЦИИ ЗА БЕЗОПАСНОСТ

- Извършването на каквито и да било действия при включено електрическо напрежение носи потенциала на опасност от поражения от електрически ток. Електроразхранването трябва да бъде изключено преди започване на монтаж/подмяна.
- Монтирайте системата само върху основа, която има температура на запалване по-голяма от 200 °C и не се деформира.
- Системата следва да бъде свързана единствено към захранването на изправна електрическа инсталация, отговаряща на действащите изисквания от квалифициран специалист.
- При свързване към електрическата инсталация следвайте поларитетата:
 (L) ФАЗА=КАФЯВ, (N) НУЛА=СИН
- Всички кабели и помощни елементи трябва да бъдат разположени на подходящо разстояние от нагряващите се части на осветителното тяло. При монтаж обърнете внимание на изискванията за минимално отстояние от осветяваните обекти.
- Тялото може да се нагрява по време на работа, затова преди подмяна изчакайте да изстине.
- Преди подмяна, изключете тялото от електрическата мрежа.
- Почиствайте само със суха кърпа.
- Не покривайте елементите на системата. За да избегнете опасността от пожар, осигурете свободен достъп на въздух до нагряващите се елементи.
- Ако захранващият кабел на системата е увреден, задължително е той да бъде подменен от производителя, негов оторизиран представител или технически квалифициран специалист с цел предотвратяване на злополуки и щети.
- Преди включването на осветителя се уверете, че монтирането му е извършено правилно и изключва опасността от дефект при работа, риск за външната среда и ползвателите.
- Вносителят (доставчикът) не носи отговорност за щетите, възникнали вследствие неспазването на горепосочените препоръки за монтаж.


ВИСЯЩ МОНТАЖ



Комплект за висещ монтаж.

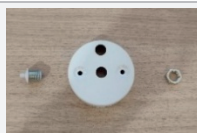

Чрез гайката, завийте към централния отвор на конзолата стягащата гилза с външна резба.

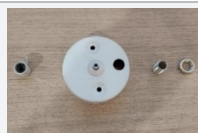


Чрез гайката и кабелния нипел, завийте кабелния щуцер към страничния отвор на конзолата.



Чрез подходящи инструменти направете отвори на монтажната повърхност.



електрическата инсталация. Чрез крепежните елементи включени в комплекта фиксирайте конзолата върху монтажната повърхност.

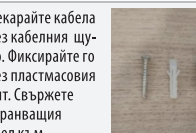

Чрез подходящи инструменти направете отвори на монтажната повърхност. Чрез крепежните елементи включени в комплекта фиксирайте монтажния цилиндър на монтажната повърхност.




Завийте стягащата гилза на стоманеното въже към монтажния цилиндър.



Прекарайте стоманените въжета през малките гилзи така, че стопера на въжетата да остане в тях.




Внимателно отстранете страничните капаци на телата. Поставете планките в канала на тялото. Поставете страничния капак.

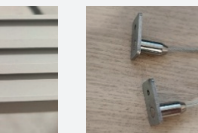

Завийте малките гилзи към планките.



Прекарайте стоманеното въже през стягащата гилза на монтажния цилиндър.

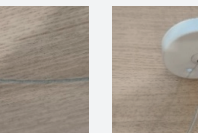


Свържете захранващия кабел към терминалния блок на тялото спазвайки посочения поларитет.












ПОВЪРХНОСТЕН МОНТАЖ




Комплект за повърхностен монтаж.
ПРОДАВА СЕ ОТДЕЛНО.

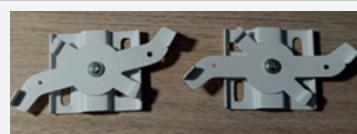

  
Използвайте винтовете и стоп гайките, слобете монтажните скоби по посочения начин.

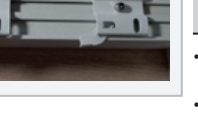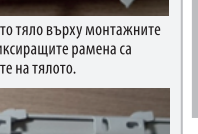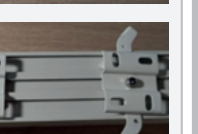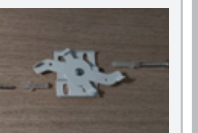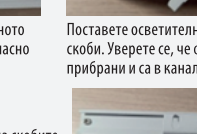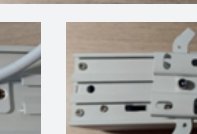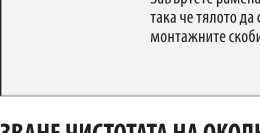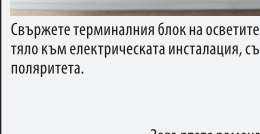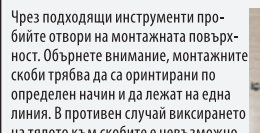


СВЪРЗВАНЕ МЕЖДУ ТЕЛА

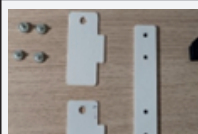

Комплект за свързване на тела.

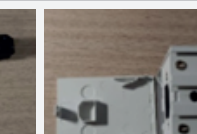


Внимателно отстранете страничните капачки на телата.

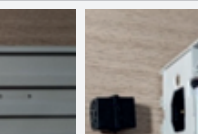


Поставете електрически съединител в конектора на тялото.



Поставете свързващите планки в жлебовете зад рефлектора, с изпъкналата част към гърба.

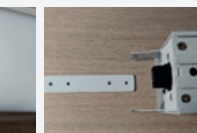


Поставете външната свързваща планка до средата, в канала на гърба. Фиксирайте с винтове.

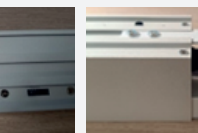


Чрез приспасване вкарайте другото тяло до пълното му прилепване едно към друго.



Фиксирайте чрез стягащите винтове.

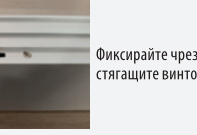

Фиксирайте чрез стягащите винтове.

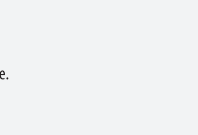

Фиксирайте чрез стягащите винтове.

ВНИМАНИЕ!!!

- ТЕЛАТА СА ПРОХОДНО ОКАБЕЛЕНИ. МАКСИМАЛНО ДОПУСТИМАТА МОЩНОСТ ПРИ ЕДНОСТРАННО ЗАХРАНВАНЕ Е 800W.
- ДОПУСКА СЕ ДВУСТРАННО ЗАХРАНВАНЕ ПРИ СЛЕДНИТЕ УСЛОВИЯ:
 1. ТЕЛАТА СЕ ЗАХРАНВАТ ОТ ЕДНА И СЪЩА ФАЗА, ЗА ДА СЕ ИЗБЕГНЕ МЕЖДУФАЗОВО КЪСО СЪЕДИНИЕЕ.
 2. СПАЗВАЙТЕ ПОЛЯРИТЕ ФАЗА (L) И НУЛА (N) ОТ ДВЕТЕ СТРАНИ НА ЗАХРАНВАНЕ, ЗА ДА СЕ ИЗБЕГНЕ ФАЗОВО КЪСО СЪЕДИНИЕЕ.
- ТЕЛАТА ИМАТ ПРЕВКЛЮЧВАТЕЛ НА ЦВЕТНАТА ТЕМПЕРАТУРА, РАЗПОЛОЖЕН НА ГЪРБА. ПРЕВКЛЮЧВАНЕТО НА ЦВЕТНАТА ТЕМПЕРАТУРА ДА СЕ ИЗВЪРШВА ЕДИНСТВЕНО ПРИ ИЗКЛЮЧЕНО ЗАХРАНВАЩО НАПРЕЖЕНИЕ.



ЗАПАЗВАНЕ ЧИСТОТАТА НА ОКОЛНАТА СРЕДА



Продуктът и неговите компоненти не са опасни за околната среда.
 Моля, изхвърляйте елементите на опаковката отделно в контейнерите, предназначени за съответния материал.
 Този продукт не е битов отпадък и потребителят е длъжен да го изхвърля само в контейнери за отделно събиране на излязло от употреба ЕЕО с цел опазване на околната среда и човешкото здраве.


TECHNICAL PARAMETERS

LOLF1240CCT

Supply voltage: 220-240 V AC/50 Hz
Power: 40W
Luminous flux: 4000 lm
CCT: 3000K/4000K/6000K
Dimensions: 50/70/1200 mm
IP rate: IP20
CRI: Ra≥80
Beam angle: 120°
Suspension mounting kit
Set for connecting the fixtures
Transparent cable 1.5 meters



E
These products contains a light source of energy efficiency class E.

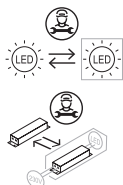


LOLFCL20CCT

Supply voltage: 220-240 V AC/50 Hz
Power: 20W
Luminous flux: 2000 lm
CCT: 3000K/4000K/6000K
Dimensions: 328/328/70 mm
IP rate: IP20
CRI: Ra≥80
Beam angle: 120°
Suspension mounting kit
Set for connecting the fixtures



 E
These products contains a light source of energy efficiency class E.




LOLFXX40CCT

Supply voltage: 220-240 V AC/50 Hz
Power: 40W
Luminous flux: 4000 lm
CCT: 3000K/4000K/6000K
Dimensions: 606/606/70 mm
IP rate: IP20
CRI: Ra≥80
Beam angle: 120°
Suspension mounting kit
Set for connecting the fixtures



 E
These products contains a light source of energy efficiency class E.




LOLFCT30CCT

Supply voltage: 220-240 V AC/50 Hz
Power: 30W
Luminous flux: 3000 lm
CCT: 3000K/4000K/6000K
Dimensions: 328/606/70 mm
IP rate: IP20
CRI: Ra≥80
Beam angle: 120°
Suspension mounting kit
Set for connecting the fixtures



 E
These products contains a light source of energy efficiency class E.



LOLSFIK

Surface mounting kit.

FOR SALE SEPARATELY!

SAFETY INSTRUCTIONS


- Carrying out any action when the electrical system is switched on carries a potential risk of electric shock. The power supply must be switched off before starting installation/replacement.
- Mount the system only on a substrate that has an ignition temperature greater than 200 °C and does not warp.
- The system should only be connected to the power supply of a serviceable electrical installation meeting the current requirements by a qualified professional.
- When connecting to the electrical installation, follow the polarity:
(L) PHASE=BROWN, (N) NEUTRAL=BLUE
- All wiring and auxiliary items must be located at an appropriate distance from the heated parts of the luminaire. When installing, pay attention to the minimum distance requirements from

- the illuminated objects.
- The fixture may heat up during operation, so wait for it to cool down before replacing.
- Before replacement, disconnect the luminaire from the mains.
- Clean only with dry cloth.
- Do not cover the elements of the system. To avoid fire hazards, allow free air access to the heated elements.
- If the system's power cable is damaged, it must be replaced by the manufacturer, its authorized representative or a technically qualified specialist to prevent accidents and damage.
- Before switching on the fixture, make sure that its installation has been carried out correctly and excludes the risk of defective operation, risk to the external environment and users.
- The importer/supplier shall not be liable for damages resulting from failure to follow the above installation recommendations.


SUSPENDED INSTALLATION



Suspension mounting kit.

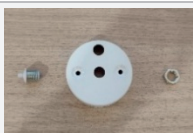

Using the nut, screw the clamping sleeve with external thread onto the central hole of the bracket.

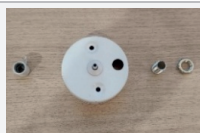

Using the nut and cable nipple, screw the cable connector to the side hole of the bracket.



Using appropriate tools, make holes in the mounting surface.



Pass the cable through the cable gland. Secure it with the plastic screw. Connect the power cable to the electrical installation. Use the fasteners included in the kit to secure the console to the mounting surface.



Using appropriate tools, make holes in the mounting surface. Use the fasteners included in the kit to secure the mounting cylinder to the mounting surface.



Screw the tightening sleeve of the steel cable onto the mounting cylinder.



Pass the steel cables through the small sleeves so that the cable stoppers remain inside them.




Carefully remove the side covers of the housings. Insert the plates into the channel of the body. Put the side cover on.



Screw the small sleeves onto the plates.



Pass the steel cable through the clamping sleeve of the mounting cylinder.

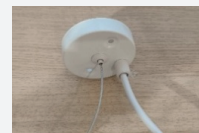


Pass the steel cable through the clamping sleeve of the mounting console. Connect the power cable to the terminal block on the body, observing the specified polarity.

SURFACE MOUNTING



Surface mounting kit.
FOR SALE SEPARATELY!

Using suitable tools, drill holes in the mounting surface. Please note that the mounting brackets must be oriented in a specific way and lie in a straight line. Otherwise, it is impossible to fix the body onto the clamps.

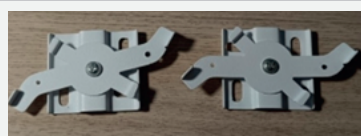

Using the screws and lock nuts, assemble the mounting brackets as shown.



Connect the terminal block of the lighting fixture to the electrical installation according to the polarity.



Place the light fixture on the mounting brackets. Ensure that the fixing arms are retracted and are in the channels of the body.



Rotate the arms of the clamps so that the body is fixed in the mounting clamps.

CONNECTION BETWEEN FIXTURES



Fixture connection kit.



Carefully remove the side caps of the housings.



Insert the electrical coupler into the connector on the fixture.




Place the connecting plates in the slots behind the reflector, with the protruding part facing the back.



Place the outer connecting plate in the middle, in the channel on the back. Fix with screws.



By fitting, bring the other body into complete contact with each other.

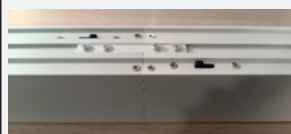

Fix with the tightening screws.

ATTENTION!!!

- THE FIXTURES ARE PASS-THROUGH WIRED. THE MAXIMUM ALLOWED POWER FOR SINGLE-SIDED POWER SUPPLY IS 800W.
- TWO-SIDED POWER SUPPLY IS PERMITTED UNDER THE FOLLOWING CONDITIONS:
 1. THE FIXTURES ARE POWERED BY THE SAME PHASE TO AVOID INTERPHASE SHORT CIRCUITS.
 2. OBSERVE THE POLARITY PHASE (L) AND NEUTRAL (N) ON BOTH SIDES OF THE POWER SUPPLY TO AVOID PHASE SHORT CIRCUIT.
- THE FIXTURES HAVE A COLOR TEMPERATURE SWITCH LOCATED ON THE BACK. THE COLOR TEMPERATURE SHOULD ONLY BE SWITCHED WHEN THE POWER SUPPLY IS TURNED OFF.



TAKING CARE OF THE NATURAL ENVIRONMENT CLEANLINESS



- The product and its components are not harmful to the environment.
- Please dispose the package elements separately in containers for the corresponding material.
- Please dispose of the broken product separately in containers for out-of-usage electrical equipment.